



Official Lane Maintenance and Capital Equipment Provider

DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date, Pattern Type, Pattern Difficulty (Medium), Pattern Designer, Pattern Volume (ml) 21,17

Surface Information

Surface Type (Synthetic), Surface Brand (Brunswick Pro Lane), Age

Pattern Parameters

Pattern Number, Pattern Name (39), Mode, Forward Speed (Max Clean), Start Cleaner Spray (0), Start Squeegee (0), Start Oiling (6), Split Pattern (No)

Supplies Information

Lane Cleaner, Cleaner Mixture Ratio (: 1), Cleaner Transition Distance (45), Cleaner Spray End Distance (51), Lane Conditioner

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio, Zone Volume (ml)).

Table with columns for ZONE, 7 Pin Side, Board Number, and 10 Pin Side. Rows 1-8 show data for each zone.

