



Official Lane Maintenance and Capital Equipment Provider



ENVOY



AUTHORITY22®

Select Machine

### Pattern Information

Date

Pattern Type

Pattern Difficulty

Pattern Designer

Pattern Volume (ml)

### Pattern Parameters

Pattern Number

Pattern Name

Mode

Forward Speed

Start Cleaner Spray

Start Squeegee

Start Oiling

Split Pattern

### Supplies Information

Lane Cleaner

Cleaner Mixture Ratio

Cleaner Transition Distance  Authority22

Cleaner Spray End Distance  Envoy

### Surface Information

Surface Type

Surface Brand


Age

Lane Conditioner

Notes

Zone	1	2	3	4	5	6	7	8
Zone End Distance	10	18	24	30	40	0		
Zone Ratio	L 2,6 : 1	3,0 : 1	3,6 : 1	3,5 : 1	1,0 : 1	### : 1	### : 1	### : 1
	R 2,6 : 1	3,0 : 1	3,6 : 1	3,5 : 1	1,0 : 1	### : 1	### : 1	### : 1
Zone Volume (ml)	10,15	5,94	3,26	1,66	0,00	0,00	0,00	0,00

ZONE	7 Pin Side														Board Number												10 Pin Side													
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1	
1	15	15	15	15	25	43	60	75	80	80	80	80	80	80	85	85	85	85	85	85	85	85	85	85	80	80	80	80	80	80	75	60	43	25	15	15	15	15		
2	10	10	10	10	20	30	38	45	55	60	60	60	60	60	65	65	65	65	65	65	65	65	65	65	60	60	60	60	60	55	45	38	30	20	10	10	10	10		
3	5	5	5	5	12	20	26	30	40	45	45	45	45	45	50	50	50	50	50	50	50	50	50	45	45	45	45	45	40	30	26	20	12	5	5	5	5			
4	3	3	3	3	5	10	14	17	20	23	23	23	23	23	25	25	25	25	25	25	25	25	25	23	23	23	23	23	20	17	14	10	5	3	3	3	3			
5	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1			
6																																								
7																																								
8																																								

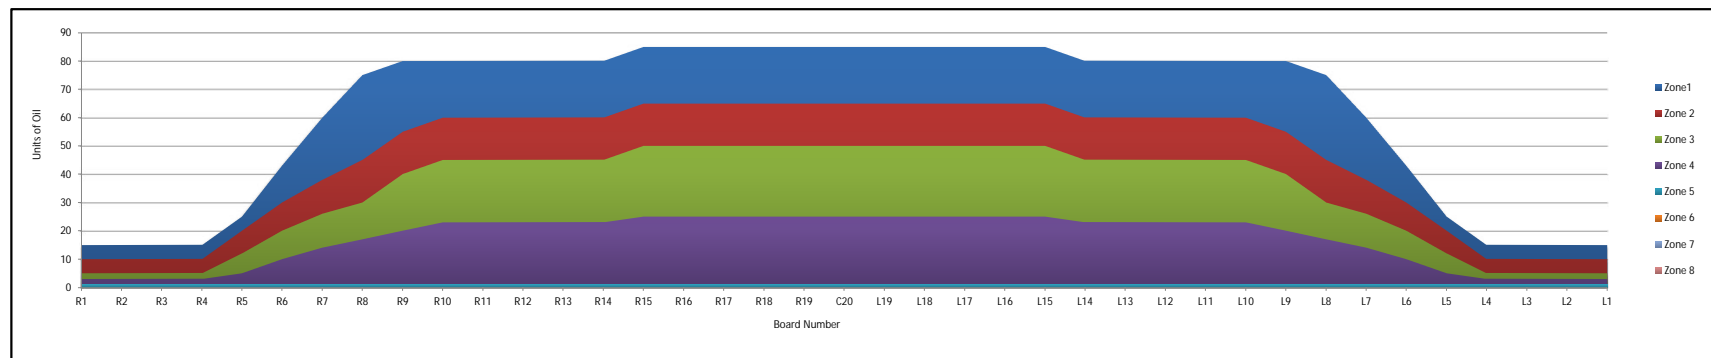



## 2022 40'

### Crosswise Ratios (by units)

Zone 1				Zone 5			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 31,6	2,6	3L-7L	Left = 1,0	1,0		
3R-7R	Right = 31,6	2,6	3R-7R	Right = 1,0	1,0		
18L-18R	Center = 85,0		18L-18R	Center = 1,0			
Zone 2				Zone 6			
3L-7L	Left = 21,6	3,0	3L-7L	Left = #####	#####		
3R-7R	Right = 21,6	3,0	3R-7R	Right = #####	#####		
18L-18R	Center = 65,0		18L-18R	Center = #####			
Zone 3				Zone 7			
3L-7L	Left = 13,6	3,6	3L-7L	Left = #####	#####		
3R-7R	Right = 13,6	3,6	3R-7R	Right = #####	#####		
18L-18R	Center = 50,0		18L-18R	Center = #####			
Zone 4				Zone 8			
3L-7L	Left = 7,0	3,5	3L-7L	Left = #####	#####		
3R-7R	Right = 7,0	3,5	3R-7R	Right = #####	#####		
18L-18R	Center = 25,0		18L-18R	Center = #####			

### Crosswise Ratios (by ml)

Zone 1				Zone 5			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 0,132	2,6	3L-7L	Left = 0,000	#####		
3R-7R	Right = 0,132	2,6	3R-7R	Right = 0,000	#####		
18L-18R	Center = 0,356		18L-18R	Center = 0,000			
Zone 2				Zone 6			
3L-7L	Left = 0,072	3,0	3L-7L	Left = 0,000	#####		
3R-7R	Right = 0,072	3,0	3R-7R	Right = 0,000	#####		
18L-18R	Center = 0,218		18L-18R	Center = 0,000			
Zone 3				Zone 7			
3L-7L	Left = 0,034	3,6	3L-7L	Left = 0,000	#####		
3R-7R	Right = 0,034	3,6	3R-7R	Right = 0,000	#####		
18L-18R	Center = 0,126		18L-18R	Center = 0,000			
Zone 4				Zone 8			
3L-7L	Left = 0,018	3,5	3L-7L	Left = 0,000	#####		
3R-7R	Right = 0,018	3,5	3R-7R	Right = 0,000	#####		
18L-18R	Center = 0,063		18L-18R	Center = 0,000			

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

